
## MOUNTING DESCRIPTION JT-210: SHOWER SHELF




The shower shelf is designed for keeping hygiene products. Its construction and materials prevents and obstructs persons committing suicidal actions or selfharm. Therefore, it is important that the following mounting instructions are followed.

- The shower shelf bracket must be fitted with 2 pcs carbon-rigid flat-bottomed safety screw. The screw head diameter should be between 9.5 and 10 mm to fit the recess.
- The screw diameter should not exceed 5 mm, which is the size of the holes in the bracket. The distance between the holes is 40 mm.
- Check that the screws are tightened to bottom of the recess on the bracket.
- Assembly must be such that the clamp closes tight to the surface to which it is mounted. Uneven surfaces shall therefore avoided. Check after assembly that no objects, cables or strings can be brought in between wall and mount. If so, then the bracket is not properly mounted.
- Note that the bracket is to be fitted with the short the part of the clip at the top. See also instructions on the back of the bracket.
- The shower shelf should not be mounted on the same horsiontal line as other supporting items; eg cabinets, sinks, shelves etc, with less than one distance of at least 30 cm.
  - See example 1
- When mounting two or more shower shelves on the same wall, follow the instructions in example 2, 3 and 4. When two shelves are placed on the same wall they should be mounted with a vertical or diagonal line of at least 30 cm between each other.
- Two shower shelves should not be mounted on the same horizontal line.
  - See example 4


The assembly instructions must be followed to achieve the test results made by SP, Sweden's Technical Research Institute.

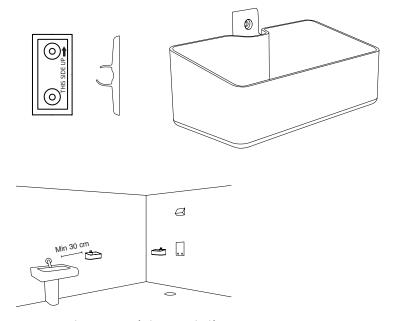


1. Correct placement of shower shelf

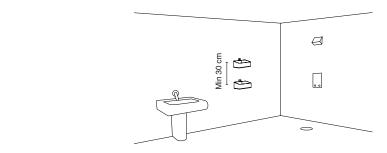

2. Correct placement of two shower shelves

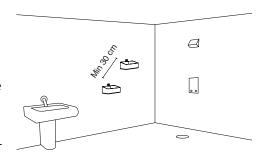

3. Correct placement of two shower shelves

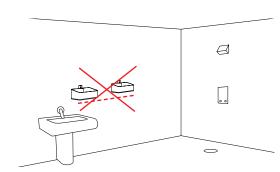

4. Wrong placement of two shower shelves