

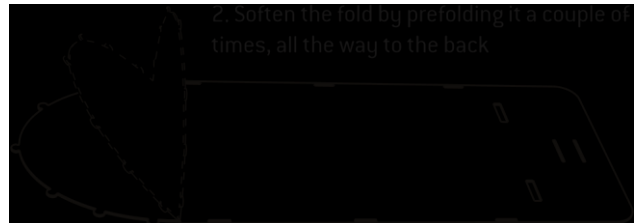


FOLDING INSTRUCTIONS JT-700: SANITARY BIN



1. The Sanitary bin consists of three parts.

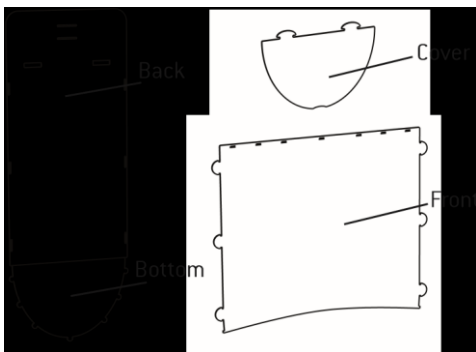

3. Remember to fold the product in the right direction. The milled folds should be folded inwards.


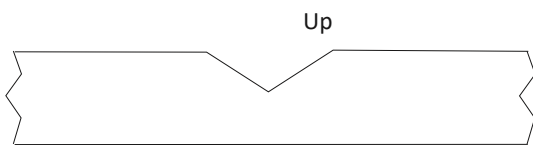


4. Attach the front to the bottom plate.

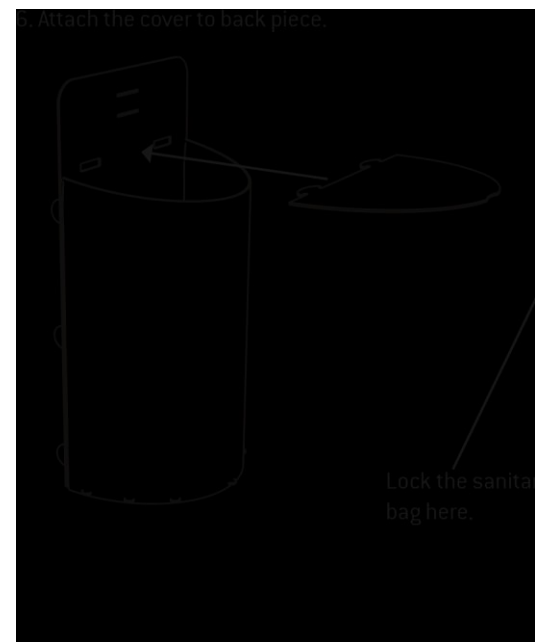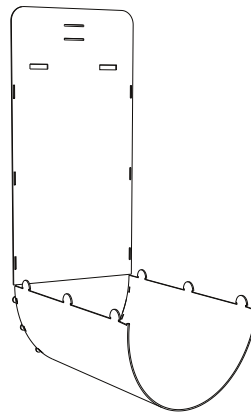

SIKRING - SELVSKADE, VOLD OG SELVMORDSFORSØG

5. Snap the front to the back piece.

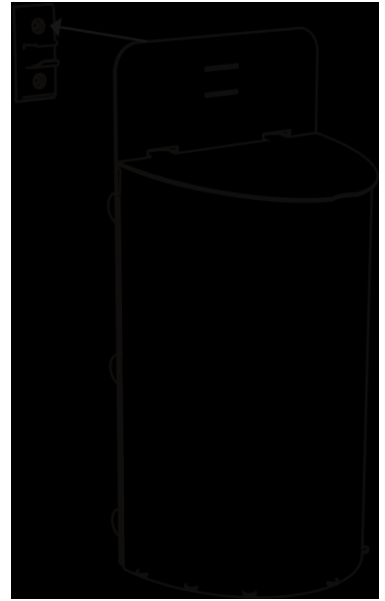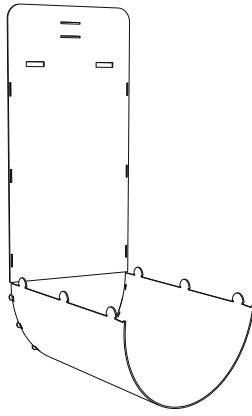

8. Attach the sanitary bin to the wall bracket.

ARKISAFE • MØLLEVEJ 9, E2 • 2990 NIVÅ • WWW.ARKISAFE.DK •
ARKISAFE@ARKISAFE.DK